



Deck Chair – Timber

01

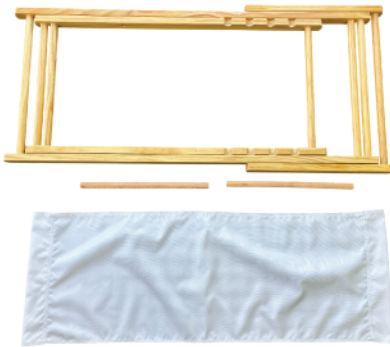

Unpack all components. You should have one frame, one printed fabric, and two support poles.

02

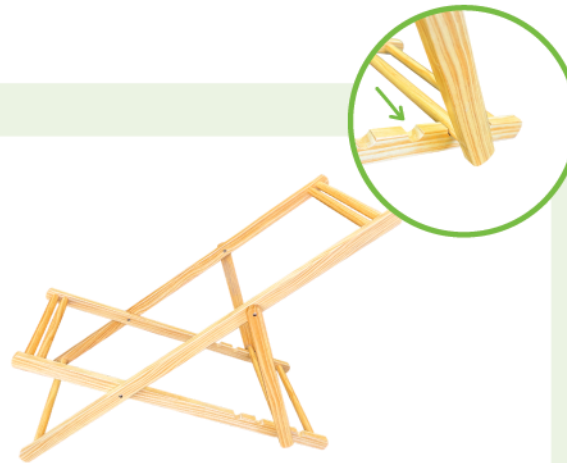

Unfold the frame and secure the support bar into one of the notches on the back leg. Select your preferred notch to adjust the seating height.

03



Slide one short edge of the fabric between the two top bars of the frame, ensuring the rod pocket is all the way through.

04



Insert the pole through the rod pocket. This will lock the fabric in place and creates tension between the bars.

05



Repeat Steps 3 and 4 on the bottom section of the chair.

06



Your deck chair is ready, sit back and enjoy.