

Care Guide

Exhibition Shell Scheme Fabric Graphics

Cleaning

We recommend that the Exhibition Shell Scheme Fabric Graphics are cleaned after every use.

To clean the Exhibition Shell Scheme Fabric Graphics use a mild detergent in warm water with a soft mop or cloth. It is important to note that no solvents or abrasive cleaners should be used on any part of the fabric.

To avoid the growth of mildew, it is important that the fabric is completely dry before being packed away.

General Use

The Exhibition Shell Scheme Fabric Graphics should not be used outdoors in windy conditions, unless you have safely secured it to avoid it being blown over.



If you are in need of any support, please contact our Customer Happiness Team on **1300 972 077** or visit www.easysigns.com.au