

Care guides

Deck Chairs

Cleaning

We recommend that the Deck Chairs are cleaned after every use.

To clean the Deck Chair use a mild detergent in warm water with a soft mop or cloth. It is important to note that no solvents or abrasive cleaners should be used on any part of the Deck Chair.

To avoid the growth of mildew, it is important that the Deck Chair is completely dry before packing down into the carry case.

Maintenance

Make sure that you check the Deck Chair before every use to ensure that:

- No part of the frame and poles are broken or damaged
- All screws are intact and tight
- Frame is clean and free of any tape or other items

Any damage to the frame or poles, or missing parts, will put extra stress on the Deck Chair and may cause structural damage or failure. The Deck Chair should not be used until these items have been repaired or replaced. Damaged parts of the frame or poles can be removed using a screwdriver. If replacement parts are required please contact the Easy Signs Customer Happiness Team at sales@easysigns.com.au and advise the exact part that you require.



If you are in need of any support, please contact our Customer Happiness Team on **1300 972 077** or visit www.easysigns.com.au